


Configuring Bluetooth


These instructions assume are using:

- a Windows 11 PC with an internal Bluetooth module
- have an HC-05 bluetooth module on your plotter
- and that your plotter is switched.


First you must “pair” your PC with the “HC-05” Bluetooth module on your robot plotter. The following steps achieve this:

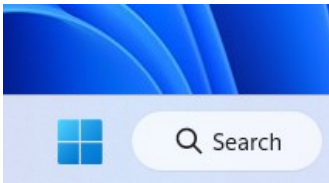

Click the “Windows” icon on your “taskbar”.

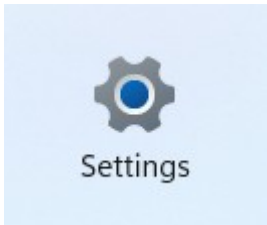


Click the “settings” button.

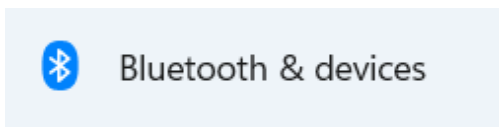

Click the “Bluetooth & Devices” tab.



Click “Add device”

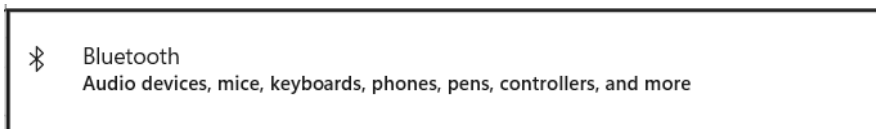


Click this

Show all devices


Click this

 HC-05


Click this.

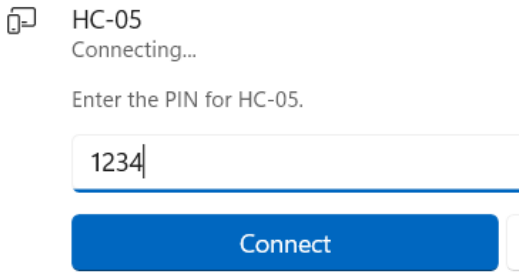

Enter the default password “1234” then click “Connect”

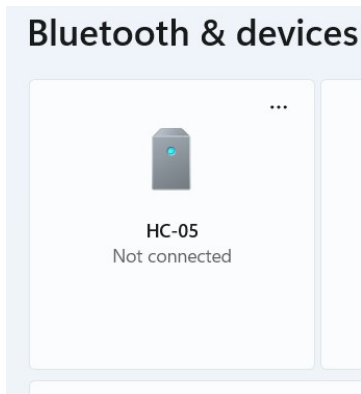

You should now see this at the top of your “Bluetooth & Devices” screen. Don’t panic about the “Not connected” notice ... you need an app such as “TeraTerm” to activate the connection.

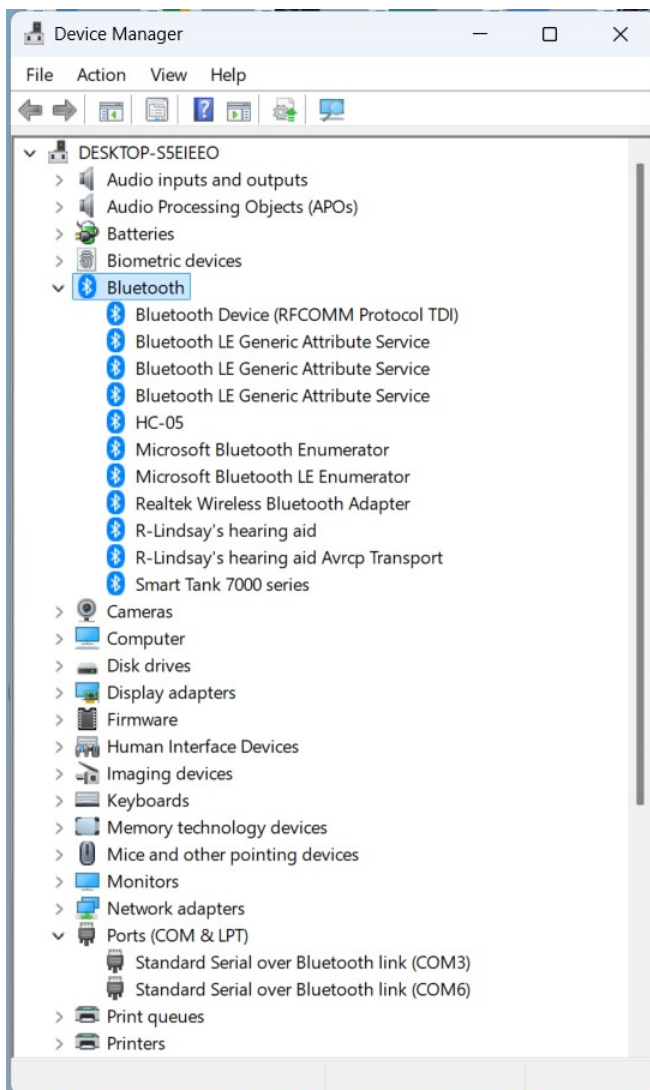

Your PC “Device Manager” should now “HC-05” under “Bluetooth”

and

“Standard Serial over Bluetooth” for COM3 and COM6 under “Ports (COM & LPT)”