

RST
3V3
5V0
GND
GND
VIN

RB2	14/A0	A6/20	RB3
RB4	15/A1	A7/21	RB5
RB8	16/A2	A8/22	RB9
RB10	17/A3	A9/23	RB11
RB12	18/A4	A10/24	RB13
RB14	19/A5	A11/25	RB15

RF0	43		
RB0	42		
RB1	41	AREF	
RF5	40	GND	
RF4	39	13	RG6
RF6	38	12	RG7
RD7	37	11	RG8
RD6	36	10	RD4
RD11	35	9	RD3
RD5	34	8	RD10
RE7	33	7	RD9
RE6	32	6	RD2
RE5	31	5	RD1
RE4	30	4	RF1
RE3	29	3	RD0
RE2	28	2	RD8
RE1	27	1	RF3
RE0	26	0	RF2