

## ENGINE SWITCH SETTINGS

### OFF (Static Action)

- 1) **Fuel Cut Solenoid** is powered (until the flywheel stops rotating).  
No more fuel.
- 2) **Spark Plug Coil** is grounded.  
No more spark.

### START (Momentary Action)

- 1) **Starter Solenoid** is powered (until the switch is released).  
**Starter** engages.
- 2) **Fuel Cut Solenoid** unpowered.  
**Fuel** is available.
- 3) **Spark Plug Coil** is ungrounded.  
**Spark Plug** is functional.

### ON (Static Action)

- 1) **Starter Solenoid** is unpowered.  
**Starter** disengages.
- 2) **Fuel Cut Solenoid** remains unpowered.  
**Fuel** remains available.
- 3) **Spark Plug Coil** remains ungrounded.  
**Spark Plug** remains functional.

