


19

Items: Tray, 600 (X2) , Tape measure

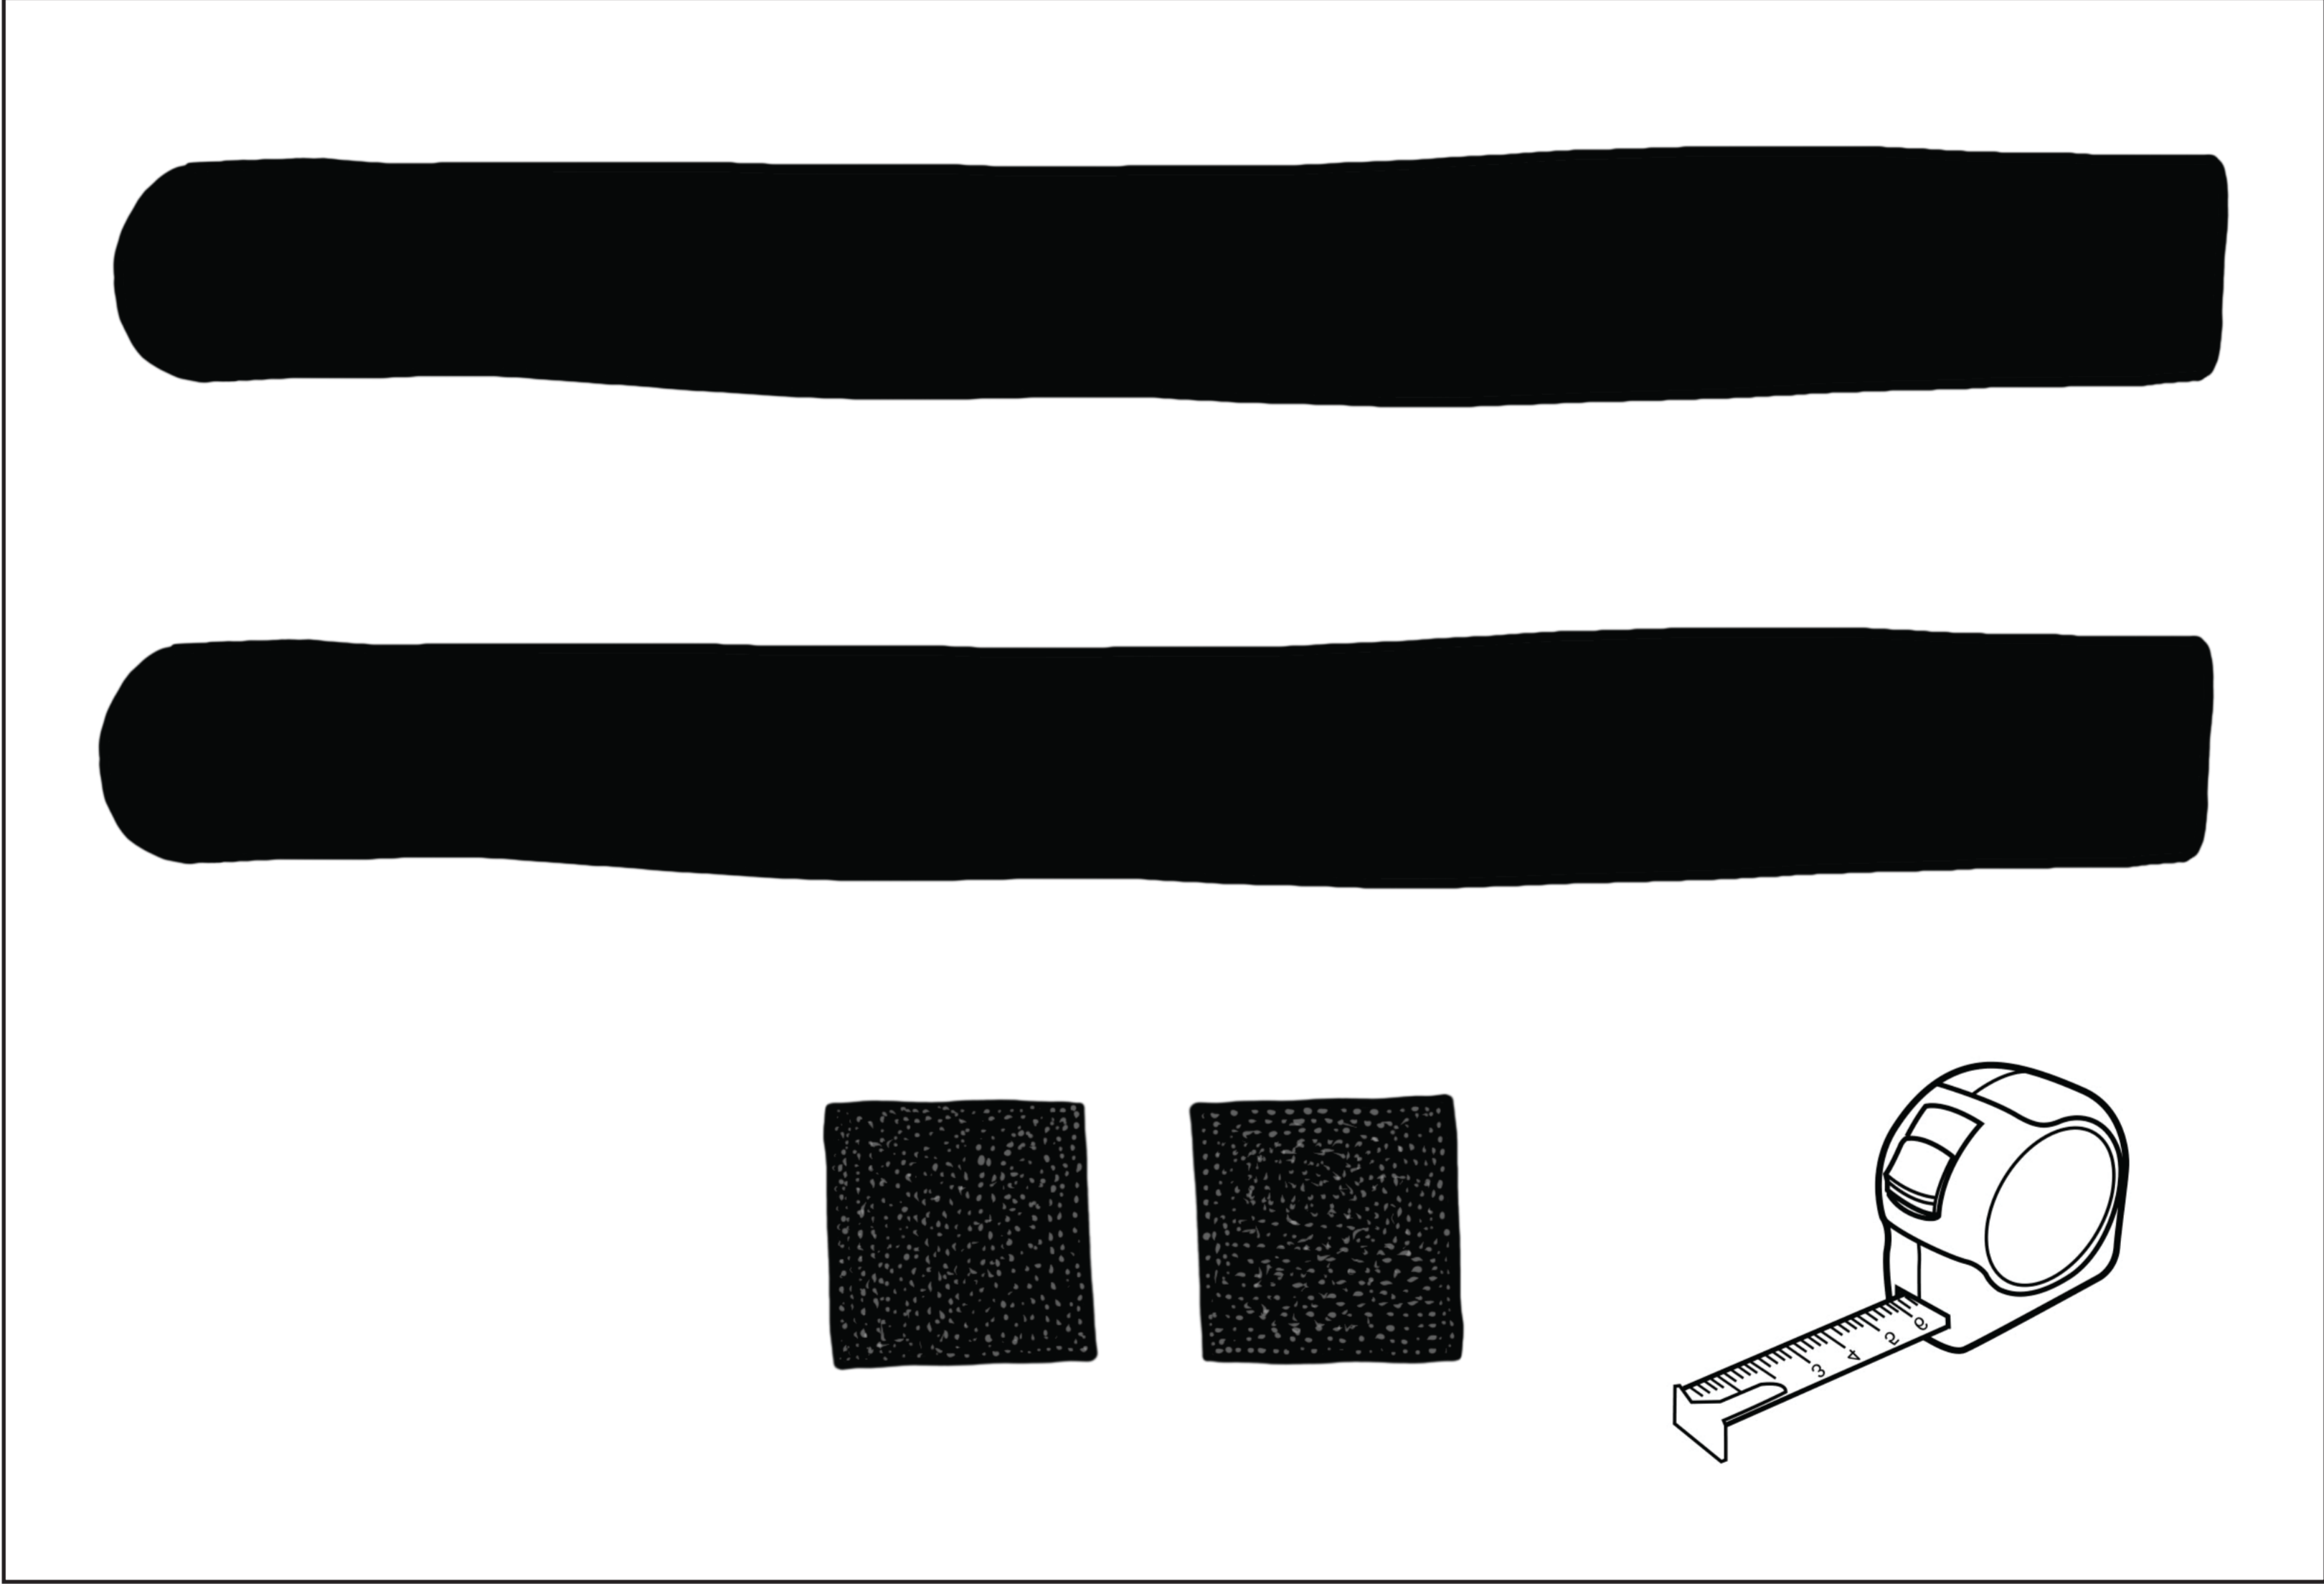

Measure the circumference of the chair handle and add 4–5 cm for overlap. Cut two long loop-side Velcro strips and two short (2–3 cm) hook-side pieces.